 
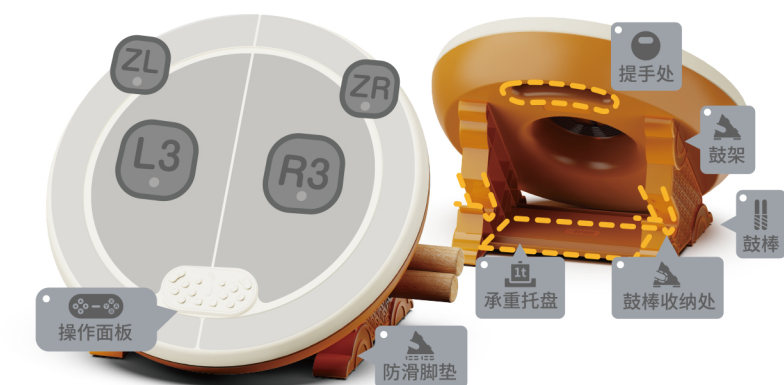 


## 完全使用手册

鼓型控制器 Pro  
Drum Controller Pro Version35cm  
巨大鼓面Elite  
专业级鼓面

含游戏设置及使用的所有方案

## 良值鼓型控制器PRO

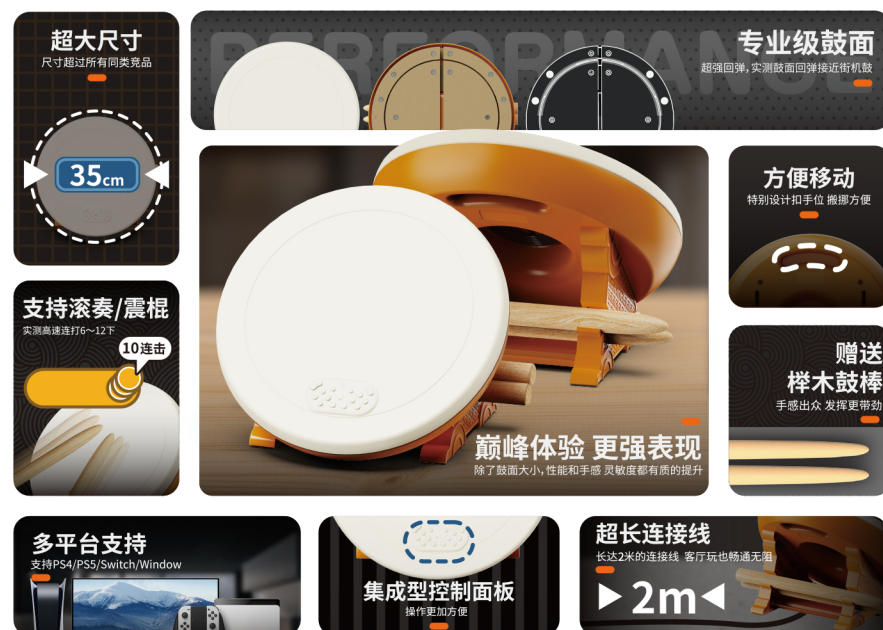

## 基本参数

产品尺寸: 282x278x350mm  
产品重量: 3140g (鼓本体)  
鼓棒尺寸: 360x20mm  
鼓棒重量: 130g± (鼓棒)  
鼓连接线长: 2m

## 产品清单

鼓架  
鼓面  
承重托盘  
鼓棒  
说明书

## 安装步骤



## 常见问题

 
- SWITCH插上, 任何操作都没反应  
重启Switch或者进去设置开启Pro有线连接
- Switch游戏内没反应  
关闭游戏, 重新让操作鼓进入游戏  
因为游戏仅识别进入游戏的操作器, 所以请务必用鼓上的控制器操作进入游戏
- 游戏有延迟, 音符敲不准  
如果用的电视可以看看有没有游戏模式切换, 或者换电脑显示器 (现在大部分游戏都支持输出延迟)  
音响用有线的 (无线的会有延迟)
- PS4/PS5插上主机没反应  
按一下鼓面上的“+”键即可 (由于PS系统需要)
- 关于PC游戏的下载  
请到“良值游戏配件”微信公众号或者QQ群705338672。

## 最佳使用建议

- 使用低输出延迟的电视或者显示器及有线音频  
即显示输出延迟达到30ms以下或更低体验越好。
  - 增强鼓的防滑性能  
垫上厚重的衣服或防滑板  
可以增加鼓的稳定性
  - 增强鼓的重量  
将鼓的总重量提升到7kg以上, 能达到更加舒适的手感
  - 调整合适的角度  
鼓面45°, 适合新手玩家, 调整到55°, 更加适合进阶选手
  - 调整合适的高度  
一般桌面75cm的高度, 将鼓垫高个15~30cm, 因人而异
- 推荐进阶套件**
- 更舒适的角度
  - 增强防滑性能
  - 增强鼓的重量

## SWITCH使用教程

设置一手柄与感应器—Pro手柄的有线连接—开启  
第一次使用时, 需要进去手柄设置开启有线手柄

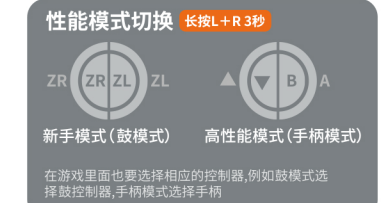

## PC使用教程

关于PC使用  
直接把鼓插入电脑的USB接口即可 (设置一蓝牙和其他设备—设备—Drum Controller Pro Version)

玩我想玩  
PLAY MY WAY

扫码二维码了解产品使用问题

 
良值  
いいねUser Manual  
in English

Drum Controller Pro Version

35cm  
Huge Drum SurfaceElite  
Professional Drum

Contains Game Settings and All Schemes Used

## IINE Drum Controller Pro Version

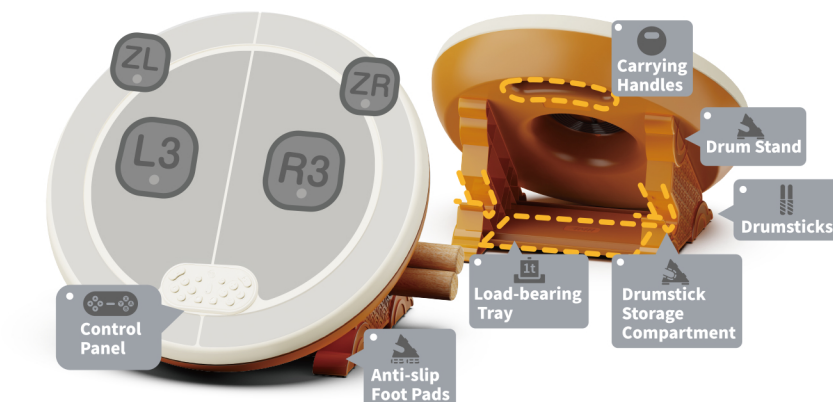


## Specifications

Product Dimensions: 282x278x350mm  
Product Weight: 3140g  
Drum stick Dimensions: 360x20mm  
Drum stick Weight: 130g  
Drum Connection Cable Length: 2m

## Packing Lists

Drum frame  
Drum Surface  
Drum stick  
User Manual
 
## Installation Steps

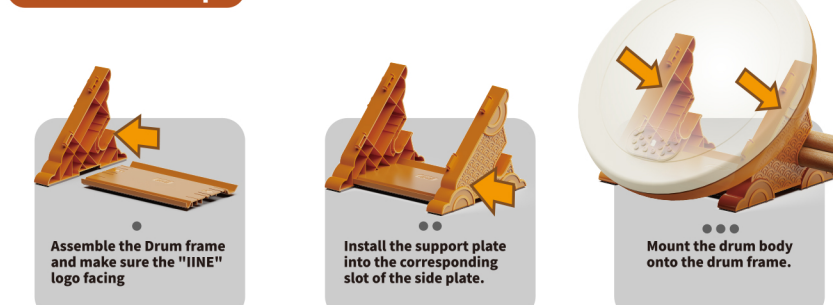


## How to solve common issues?

- If no response after being connected with Switch  
Restart the Switch and make sure that you open the [Pro Controller Wired Communication] on your Switch.
- If no response in the game  
Close the game and restart, then enter the game by using the drum controller. Because the game only recognizes the controller which is used to enter the game.
- If Game delay, inaccurate note hits  
The common reason is using a TV monitor, the solutions are above to check. Firstly, make sure that the game mode of your TV monitor is opened. Secondly, instead of a computer monitor (since many TV monitor have output delay). Thirdly, instead of using the wired audio (wireless connections may cause delay).
- If no response when the Drum is connected with to PS4/PS5 console  
Press the [HOME] button on the drum panel.
- What is the Game on the computer?  
For instance, if you're playing games on the network. Download it according to the online tutorial. If you have any questions, please search @iineofficial on YouTube and contact us.


## Best Usage Recommendations

- To achieve optimal performance, please consider the following practices:
- Use a computer or monitor with low output latency and wired audio. With display output latency of 30ms or less, the usage experience will be better.
  - Enhance drum's anti-slip properties:  
Through placing thick clothing or non-slip pads underneath which can increase the drum's stability.
  - Adjust to appropriate angle:  
The drum surface angle of 45° is suitable for novice players, while adjusting it to 55° may better suit advanced players.
  - Increase the drum's weight:  
Elevating the total weight of the drum to over 7kg can provide a more comfortable feel.
  - Adjust to appropriate height:  
For instance, if you're playing games on a table that's 75cm tall, you can raise the drum pad by 15 to 30cm to find the most suitable height. And so on
 
## How to connect with Switch?

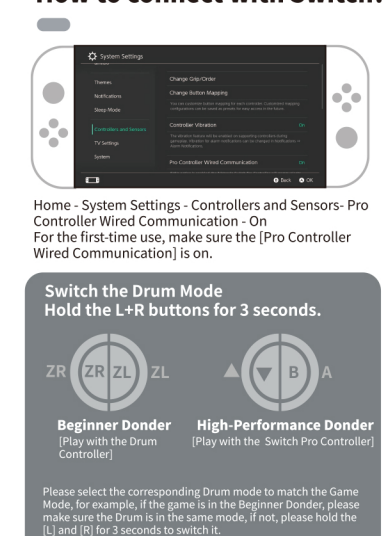

## How to connect with computer?

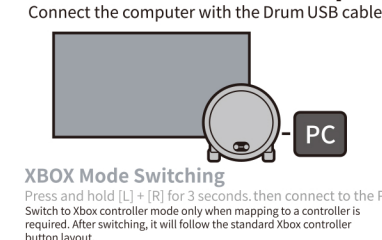 

## PS4/PS5使用教程

将太鼓插入PS4/PS5之后, 按下鼓面上的“+”  
仅支持PS4游戏 (包括PS5里的PS4鼓游戏)



## 玩家须知

良值官方  
微信公众号:

● 良值游戏配件

良值太鼓官方  
QQ交流群: 705338672

- 交流游戏心得
- 歌曲悬赏活动
- 达人进阶交流
- 刷存在感吃瓜

良值Pro太鼓官方  
QQ交流群: 1121681436

- 交流游戏心得
- 歌曲悬赏活动
- 达人进阶交流
- 刷存在感吃瓜